
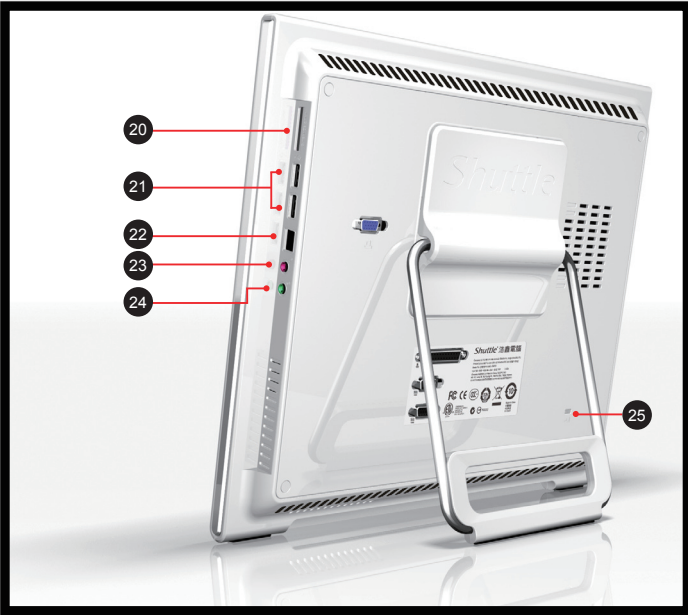
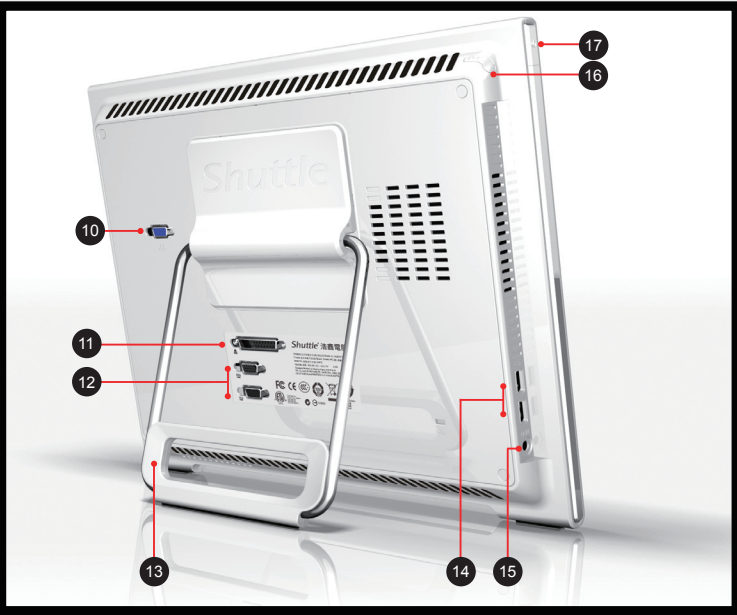


# X50V2 Plus / X50V2 PL. Quick Guide (English)

Shuttle®


## Front/Rear/Side View

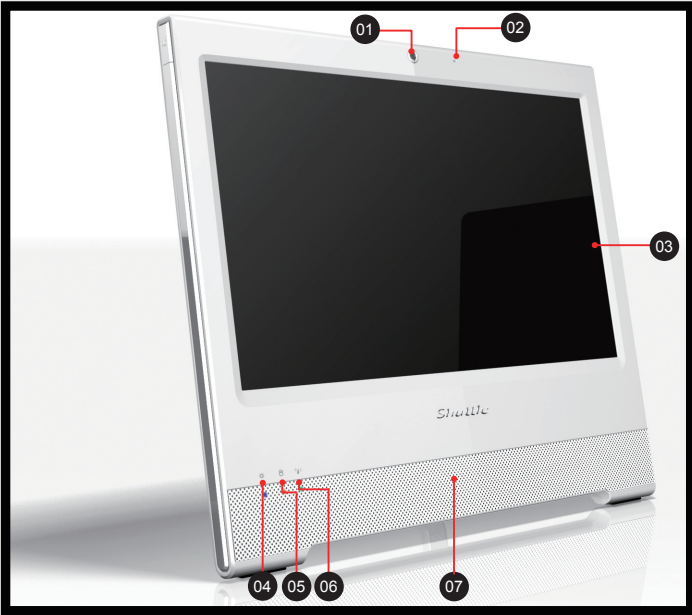

- 01 Webcam
- 02 Microphone
- 03 LCD Display (Touch enabled for X50V2 Plus only)
- 04 Brightness controls
- 05 Hard disk drive LED
- 06 WiFi LED
- 07 Stereo speaker
- 10 VGA Port
- 11 Printer Port
- 12 COM Ports
- 13 Stand / Handle
- 14 USB Ports
- 15 Power input DCIN
- 16 Stylus pen
- 17 Power Switch

- 20 4 in 1 Memory card reader
- 21 USB Ports
- 22 LAN Port
- 23 MIC-In Port
- 24 Audio Line-Out Port
- 25 Kensington® Lock Port


## Placing on the desktop

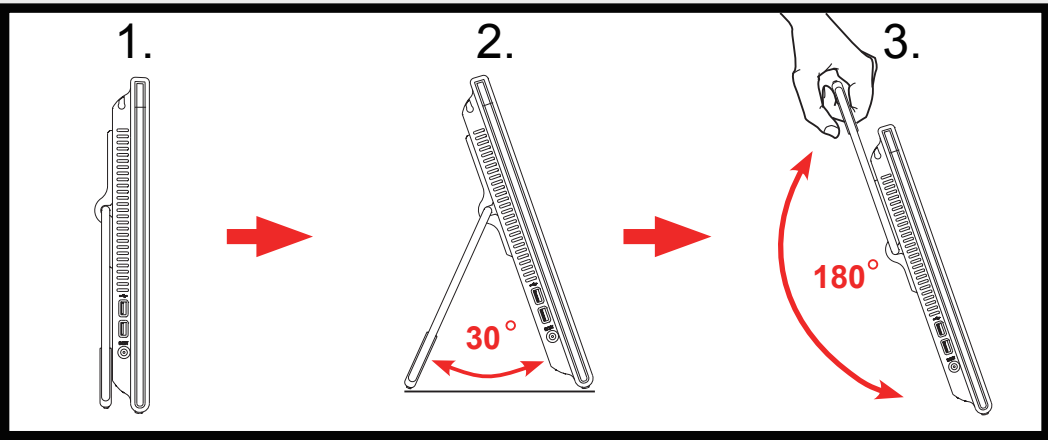


- To placing on the desktop and carry your X50V2, do the following:  
Place X50V2 on a flat surface such as a table (Picture 1), and pull the stand open until it angle of 30°. (Picture 2) When carry or move your X50V2, hold the Top of the computer by its handle. (Picture 3)

## Powering on the system

- Follow the steps (1~3) below to connect the AC adapter to the DCIN jack. Press the **Power Switch** to turn on the system.

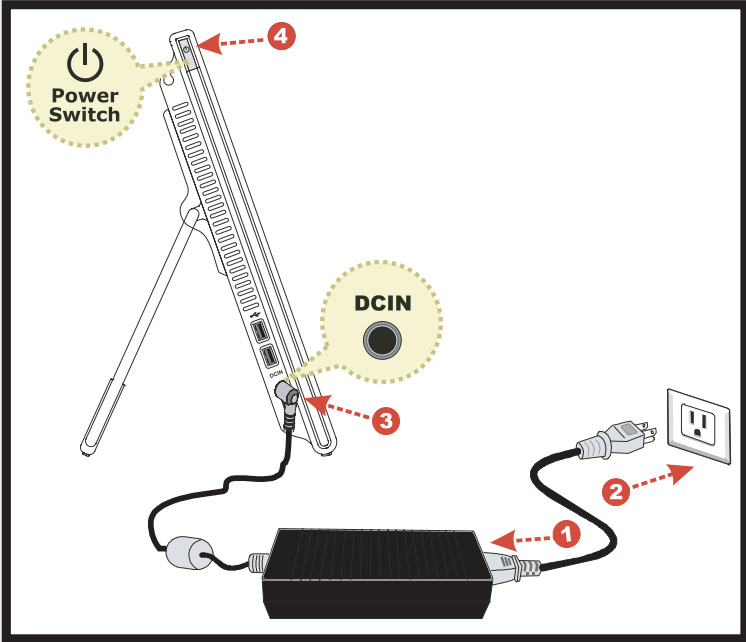

## How to use Touch Panel (For X50V2 Plus only)

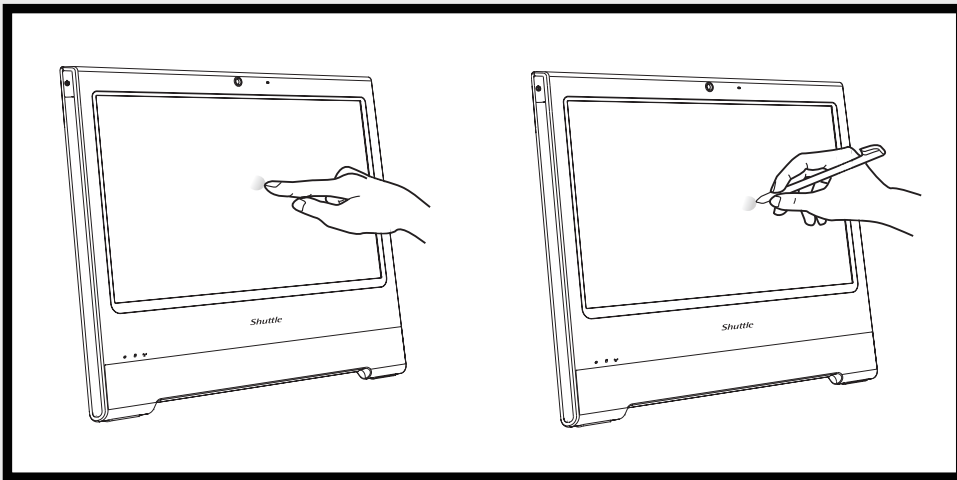

- X50V2 Plus brings digital life for an easy touch experience. Experience the ease of managing your digital life with a few touches or the use of the stylus pen. Your touch functions like a mouse device and all you need to interact with the X50V2 Plus.

- Touch = left-click on the mouse
- Touch and hold = right-click on the mouse

## Cleaning the touch screen

Follow these rules for cleaning the outside and handling your screen on the computer :

Turn off the system and disconnect all cables.


Use a damp, or cleaning cloth, soft, lint-free cloth with gentle water only and gently wipe the screen surface.

Do not spray liquid directly on the screen.


## 4 Point Calibration (For X50V2 Plus only)

- Run the screen calibration program and correct 4 point locations on screen with the panel.


Click **Start / All Programs / eGalax Touch / Configure Utility**  
Select **Tools** tab and click **4 Points Calibration**.

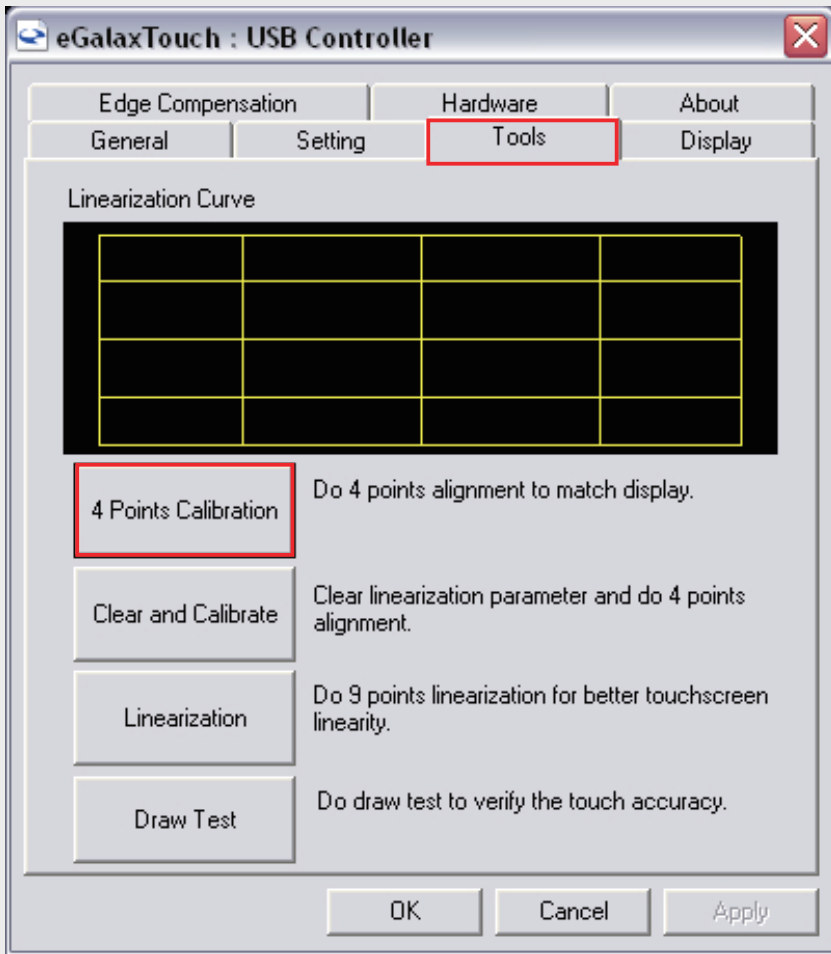


- Touch and hold the center of the target. Repeat on four corners and the screen will adjust automatically.

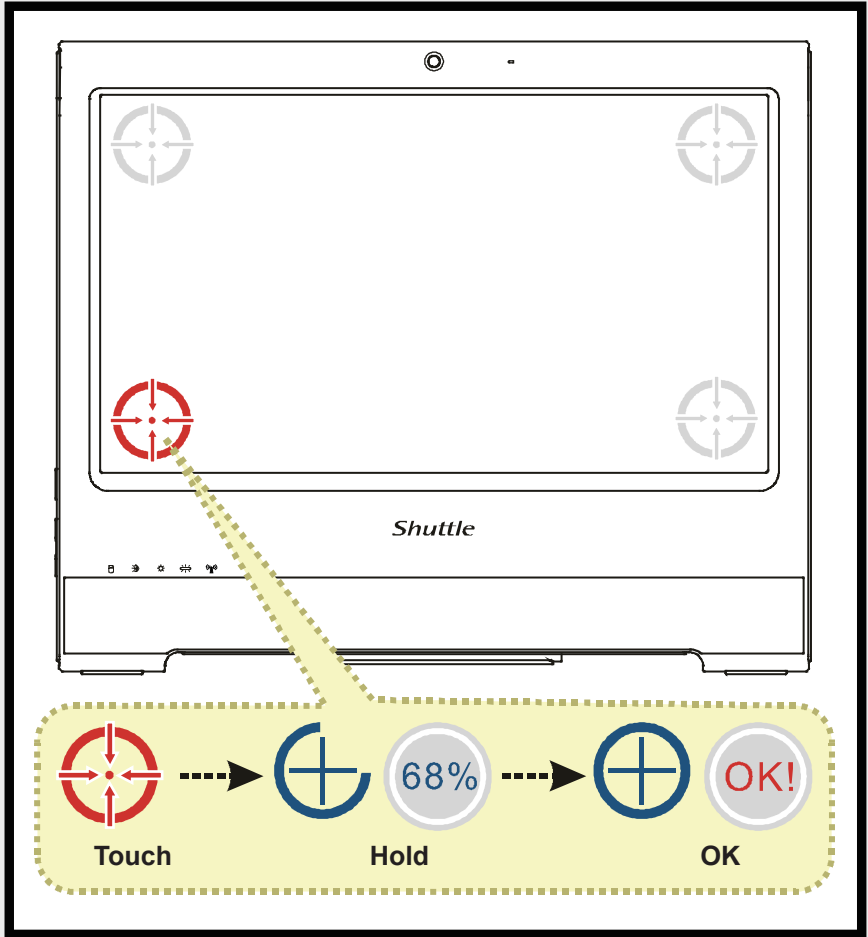

- When the 4 points calibration completed, press **OK** to continue.

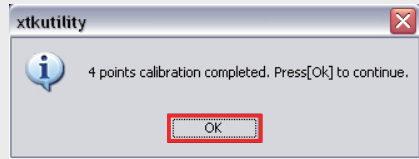

## VESA mounting to the wall

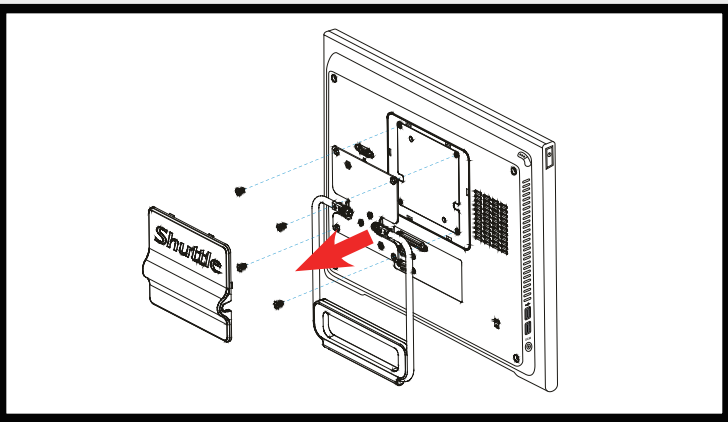

- If you are mounting your X50V2 to the wall, remove the "Shuttle" Cover on the back of X50V2 first.  
Unscrew 4 screws of the stand mount and remove the stand. Standard VESA to let user mount it on the wall easily. Please refer to the user guide of the wall/arm mount kit you bought to install it.

Note: X50V2 can be mounted on a wall using a VESA compatible 100mm x 100mm wall/arm bracket.


- Safety Information**  
Read the following precautions before setting up a Shuttle X50V2.

**CAUTION**  
Do not walk on the power cord or allow anything to rest on it. The warranty does not apply to the products that have been disassembled by users.

## How to use Control AP

- Click the application of short cut on desktop or Click start bottom / All Programs / Control AP folder / Control AP (Please refer the figure after starting)

Note: Descriptions of Control AP function:  
1.Screen brightness control 2.Light Bar brightness control  
3.Wireless ON/OFF 4.Web Camera ON/OFF  
5.LCD/CRT switch 6.EXIT

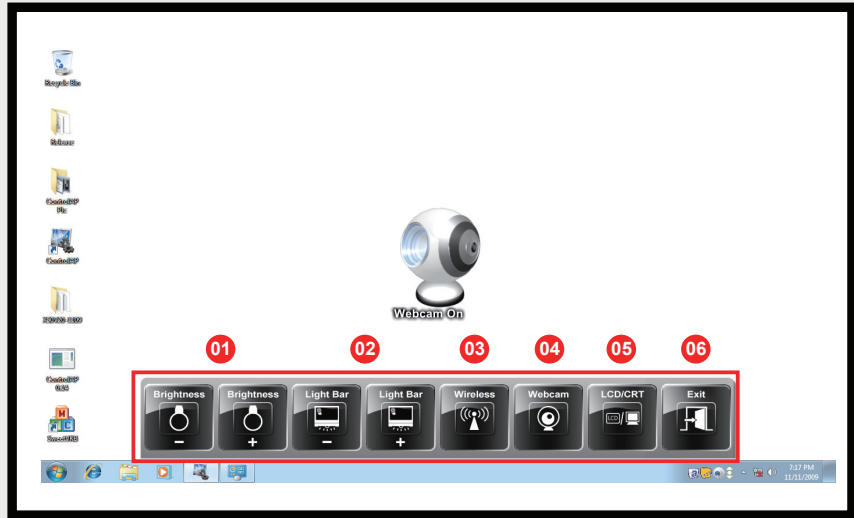

**CAUTION**  
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.